


MH802

Wireless PIR Motion Sensor Alarm

User Manual

Product Diagram

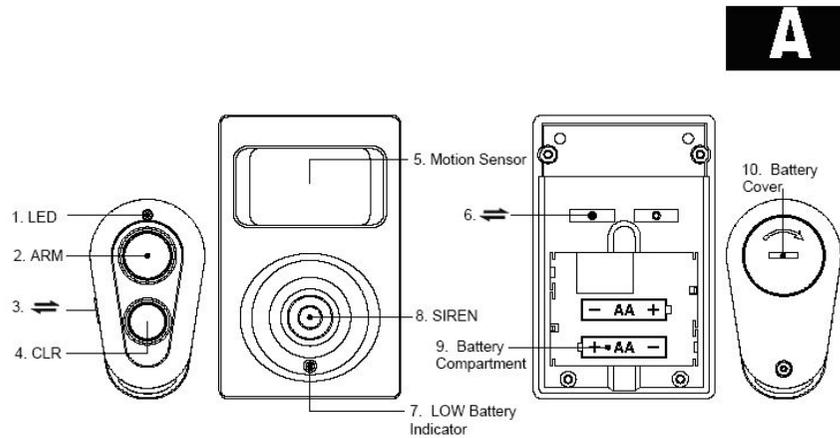

Battery Installation

Battery compartment is accessed from the rear of alarm by removing screw from the base of alarm and lifting the battery cover. Insert 3 pieces 'AA' alkaline batteries(not included) following the polarity in battery compartment as shown(9). When the last battery is inserted the LED (7)will flash to confirm battery installation properly. Replace back battery cover and fix with screws. The low battery indicator light will illuminate when the batteries need replacing.

Pairing with other devices

After insert the batteries or Under disarm mode, press and hold the learn code button of the alarm (6) and the remote control (3) at the same time , free your hands ,after you will hear 2 beeps, it indicates the alarm is paired with remote control successfully.

Note: If want to add other 800 series device to construct alarm system ,Simply by learn code with the same remote control of MH802.

Without remote control, the alarm also can pair with other MH800 series device such as MH803, MH808 as below:

- ① Using selected master unit(The keypad motion detector alarm MH808 and door contact alarm MH803 are master units), under disarm mode, input password and press "Enter"
- ② Press and hold learn code button of master unit, the LED light keeps on,

③ Press and hold learn code button of those alarms which intend to be paired with,

④After hearing the "beep" sound twice, release the learn code button, it indicates the device has been connected successfully.

Note: To erase the learnt code just simply by pressing and holding the learn code button, then reload batteries. Alarm will make three 'beep' sound to indicate that the learnt code is erased successfully. After erasing the learnt code of MH802, it can be only used alone.


All steps should be one by one closely, 5 seconds delay between any of above steps is not allowed.

Alarm Installation

Firstly, secure the bracket at the desired location with the screws supplied as below diagram 1 shown.

Fix the rear cover to bracket with screw as diagram 2 shown.

The alarm body can be snapped into place onto the rear cover and secured using screws at the button of alarm as diagram 3 shown. Lastly, adjust alarm toward to ideal detect direction.

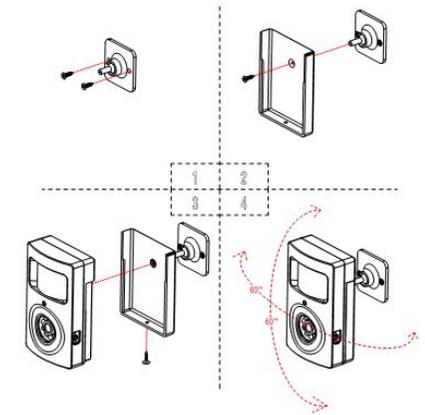

Operating Alarm

Arming the Unit: Press 'ARM' button on the paired remote control, or receive the arming signal from paired alarm to arm the alarm its LED keeps on for 4 seconds, You have 30 seconds to vacate the area .

Disarming the Unit: When entering protected area the low battery indicator light will flash one time, it indicates the movement is detected. You have 5 seconds to press 'CLR' button on the paired remote control or receive the disarming signal from paired alarm to disarm the alarm, its LED keeps on for 4 seconds.

Battery Precaution

- ◆ Install appropriate size and polarity alkaline batteries into battery compartment.
- ◆ Do not mix the different type of battery such as Alkaline and Carbon-zinc or old batteries with new, do not recharge batteries they are not intended to be recharged.
- ◆ For the environment protect purpose, please follow the local regulation to deal with powerless batteries.
- ◆ If not use for long period time, remove battery to prevent possible battery leakage.