


# MH803

## Wireless Door&Window Sensor Alarm

### User Manual

#### Production diagram

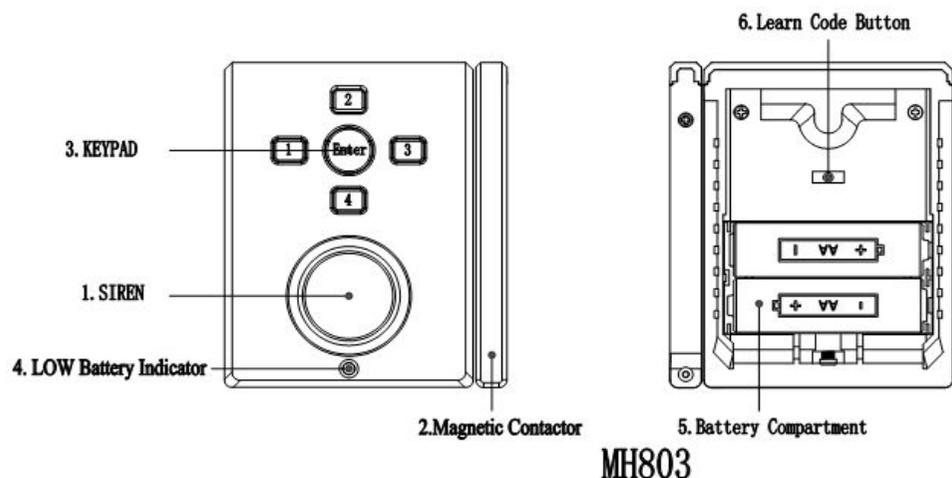

#### Battery and Product Installation

1. Open the battery compartment cover after removing the screw at the rear of alarm, Insert 2 pieces 'AA' alkaline batteries(not included) following correct polarity in battery compartment. when the last battery is inserted, the alarm will beep to confirm batteries were installed correctly, fix back battery cover with screws.

2. Install the main unit and magnetic contactor on door or window with double adhesive tape ,make sure the main unit and the magnetic contactor are aligned at the same parallel level at the closest distance(within 10mm). it can be used after installation finished.

#### Password Setting Management

##### Change the new password :

1: input factory default password "1,2,3,4," and press "Enter" button to enter into password changing mode (LED will keep on if password input correct).

2: input 4-6 digit new password, and then press "Enter" to confirm password change, the LED will flash 3 times if the password changed successfully .

Note: pls press the password in consecutive way, time gap should within 3seconds in avoid of password

setting failure. (Password will be automatically reset to factory default password If you replace the battery).

#### Pairing with other devices

Under disarm mode with the batteries, press and hold both the learn code button behind the MH803 and the "learn code" button on the remote controller (KF801) for seconds, when MH803 " Beep" twice then release button, LED will flash 3times to confirm the connection is setted successfully.

Without remote control, the alarm also can pair with other MH800 series device such as MH801, MH802, MH804, MH805, MH806, MH807 as below:

- ① Using MH803, under disarm mode, input password and press "Enter"
- ② Press and hold learn code button of master unit, the LED light keeps on,
- ③ Press and hold learn code button of those alarms which intend to be paired with,
- ④ After hearing the "beep" sound twice, release the learn code button, it indicates the device has been connected successfully.

*Note: To erase the learnt code just simply by pressing and holding the learn code button, then reload batteries. Alarm will make three 'beep' sound to indicate that the learnt code is erased successfully. After erasing the learnt code of MH803, it can be only used alone.*

*All steps should be one by one closely, 5 seconds delay between any of above steps is not allowed.*

#### Operation Instruction

##### Arming& Disarming the Unit:

1. Press "Enter" button on the MH803, the device will "beep", LED light keep on 4seconds, and it will send the wireless signal to all the connected device, after 30second, all connected devices will be under arm mode. when the door or window were detected open, the alarm will "beep" 1times to remind and the alarm will be trigger after 5seconds. if you need to turn off the alarm, pls input the correct password and press "enter" button to confirm, the alarm will "beep" 1times and LED light on 4seconds and begin to send the wireless signal to disarm all connected devices.

2. Press "Arm" button on the remote controller (KF801), MH803 will "beep" 1times and LED light on 4seconds, and begin to send the wireless signal to all the connected devices to turn on, after 30second, it will be under arm mode. when the door or window were detected open, the alarm will "beep" 1time to remind and the alarm will be trigger after 5second. if you need to turn off the alarm, just press "CLR" button on the KF801, MH803 will "beep" 1times and LED light on 4seconds and begin to send the wireless signal to disarm all connected devices.

## **Silent Alarm Setting:**

1.Set Silent Alarm :under disarm mode, you can disable the siren by following steps;

Input the correct password ,press “Enter” button to confirm ,then Input ‘1’ and press ‘enter’ button.

The red led will flash 3times to confirm the silent mode was set successfully

2.Retrieve Siren Alarm :under disarm mode, to retrieve the siren as below steps;

Input the correct password, press “Enter” button , then Input ‘2’ and press ‘enter’ button

The red led will flash 3times to confirm the siren was retrieved.

*Note: The default mode is the siren mode when the batteries are installed properly.*

## **Battery Precaution**

- ◆ Install appropriate size and polarity alkaline batteries into battery compartment. Incorrect polarity may cause damage to unit.
- ◆ Do not mix the different type of battery such as Alkaline and Carbon-zinc or old batteries with new, do not recharge batteries they are not intended to be recharged.
- ◆ Do not casually throw the battery after powerless. For the environment protect purpose, please follow the local regulation to deal with them.
- ◆ If not use for long period time, remove battery to prevent possible battery leakage.