


MH804

Wireless Audio Visual Siren

User manual

Product Diagram

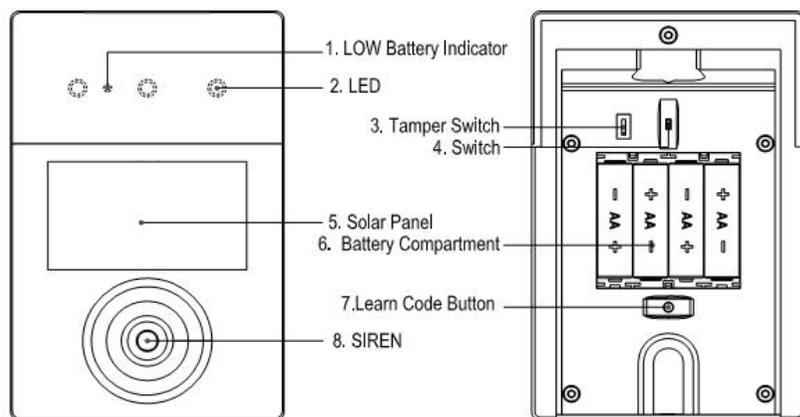

Batteries Installation

It can be used Alkaline battery (not include) and the insert Lithium battery to supply the power for MH804.

01: selector switch is pushed at upper position that choose the Lithium battery to supply the power; which charging the power by the solar panel, no need any other batteries, when used in outdoor.

02: selector switch is pushed at down position that choose the Alkaline battery to supply the power for indoor use.

Battery compartment is accessed from the rear of alarm by removing screw from the base of alarm and lifting the battery cover. Insert four pieces 'AA' alkaline batteries (not included) following battery polarity in battery compartment as shown (6). When the last battery is inserted the alarm makes a 'beep' sound and LED flashes one time to indicate batteries are installed properly, battery indicator light will illuminate and make beep sound when batteries need replacing.

Note:

1: If the anti-tamper switch (3) of the alarm is triggered, alarm will siren immediately and last for 3 minutes, and siren can't be stopped except removing batteries.

Installing Alarm


Select the desired location (make sure solar panel can be shined straight), remove the rear cover and fix it to the wall using screws supplied. The alarm body can be snapped into the rear cover and secured using screw at the base of alarm.

Note: Install alarm in the position out of easy reaching.

Connection Setting Management (Learn Code)

A. Connection setting :

under disarm mode with the batteries, press both the learn code button 4 behind the MH804 and the "learn code" button 3 on the remote controller (KF801) for 3 seconds, when MH804 "Beep" for twice then release button, LED will flash 3 times to confirm the connection set successfully.

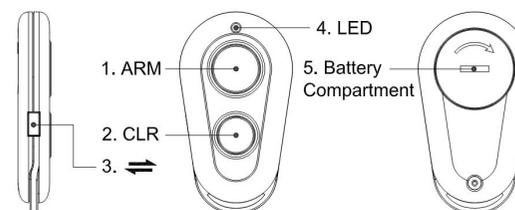

B. Connection Clearing:

Press and hold the learn code button behind MH804, and then reset the battery. when MH804 "beep" for 3 times, release the button, connection code have been cleared successfully

Operating the Alarm

Arming the Unit: Press 'ARM' button on the paired remote control to arm the alarm or receive the arming signal from paired alarm to arm the alarm, MH804 will make a beep sound when it arms, After 30 seconds, if the alarm receive the triggered signal, it will siren.

Disarming the Unit: When entering the protecting area, You have 5 seconds to press 'CLR' button on the paired remote control to disarm the alarm or receive the disarming signal from paired alarm to disarm the alarm, MH804 will make a beep sound when it disarms.

Battery Precaution

- ◆ Install appropriate size and polarity alkaline batteries into battery compartment. Incorrect polarity may cause damage to unit.
- ◆ Do not mix the different type of battery such as Alkaline and Carbon-zinc or old batteries with new, do not recharge batteries they are not intended to be recharged.
- ◆ Do not casually throw the battery after powerless. For the environment protect purpose, please follow the local regulation to deal with them.
- ◆ If not use for long period time, remove battery to prevent possible battery leakage.