


MH810

Wireless Ceiling PIR Motion Sensor Alarm

User Manual


Product Diagram

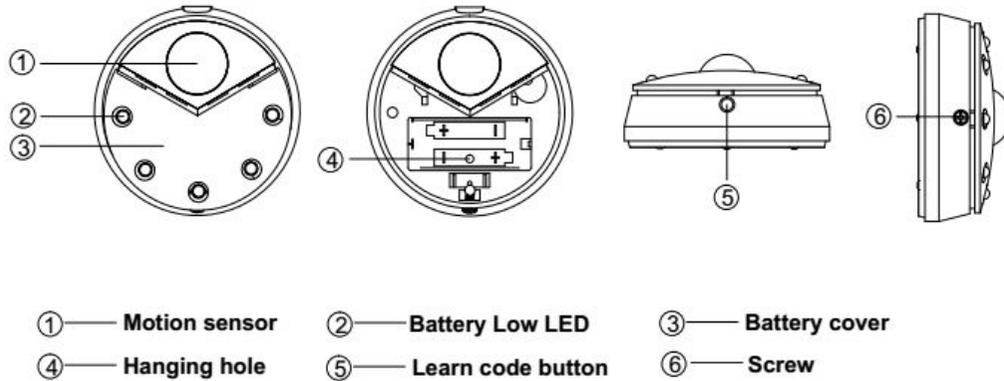

Alarm Installation and Battery Installation

Place the alarm in the desired location, preferably on the ceiling in the center of the area needing to be protected. Loosen the screw(6) and lift the battery cover. Then use the supplied screw to fix the alarm.

Battery compartment is accessed from the top of alarm by removing screw(5) at the side of alarm and lifting the battery cover. Insert 2 pieces ‘AAA’ alkaline batteries(not included) following the polarity in battery compartment as shown below. When the last battery is inserted the LED (2) will flash and one beep will sound to confirm battery installation properly. Replace battery cover and fix with screws. The battery low LED(2) will illuminate when the batteries need replacing.

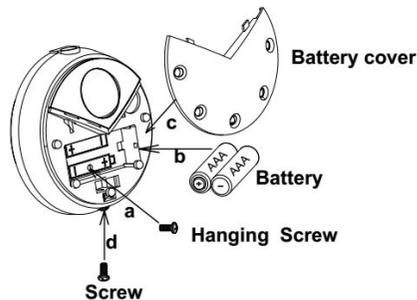

After battery installation, replace the battery cover and secure it by fastening the screw at the side of the

unit. *NOTE: The alarm must be installed to the desired position before battery installation.*

Pairing with other devices

After insert the batteries or Under disarm mode, press and hold the learn code button of the alarm(5) and the remote control(Model# KF801) at the same time , free your hands ,you will see its LED keeps on for 4 seconds and two beeps will sound, it indicates the alarm is paired with remote control(Model# KF801) successfully.

Note: If want to add other 800 series device to construct alarm system ,Simply by learn code with the same remote control(Model# KF801) of MH810.

Without remote control, the alarm also can pair with other MH800 series device such as MH803, MH808 as below:

- ① Using selected master unit(The keypad motion detector alarm MH808 and door contact alarm MH803 are master units), under disarm mode, input password and press “Enter”
- ② Press and hold learn code button of master unit, the LED light keeps on,
- ③ Press and hold learn code button of those alarms which intend to be paired with,
- ④ After hearing the “beep” sound twice, release the learn code button, it indicates the device has been connected successfully.

Note: To erase the learnt code just simply by pressing and holding the learn code button, take out the batteries, then reload batteries several min.s later. Alarm will make three ‘beep’ sound to indicate that the learnt code is erased successfully. After erasing the learnt code of MH810, it can be only used alone. All steps should be one by one closely, 5 seconds delay between any of above steps is not allowed.

Operating Alarm

Arming the Unit: Press ‘ARM’ button on the paired remote control(Model#KF801), or receive the arming signal from paired alarm to arm the alarm its LED keeps on for 4 seconds and one beep will sound. You have 30 seconds to vacate the area .

Disarming the Unit: When entering protected area the low battery indicator light will flash one time and one beep will sound, it indicates the movement is detected. You have 5 seconds to press ‘CLR’ button on the paired remote control(Model#KF801) or receive the disarming signal from paired alarm to disarm the alarm.

Detection range: The motion detector of the alarm unit has a detection range of 360° .

Battery Precaution

- ◆ Install appropriate size and polarity alkaline batteries into battery compartment.
- ◆ Do not mix the different type of battery such as Alkaline and Carbon-zinc or old batteries with new, do not recharge batteries they are not intended to be recharged.
- ◆ For the environment protect purpose, please follow the local regulation to deal with powerless batteries.
- ◆ If not use for long period time, remove battery to prevent possible battery leakage.